



## OPTISONIC 8300 LT Technical Datasheet

Ultrasonic flowmeter for extended temperatures, low-temperature gas and cryogenic conditions

- High accuracy of 1% of MV for cryogenic gasses
- Excellent long term stability, no pressure drop
- Wide measurement range of 60:1



1	Product features	3
1.1	Ultrasonic flowmeter for low-temperature gas and cryogenic conditions	3
1.2	Transducer modifications for Low Temperature version	5
1.3	Options and variants	6
1.4	Features	7
1.5	Measuring principle	9
2	Technical data	10
2.1	Technical data	10
2.2	Dimensions and weight	23
2.2.1	Converter housing	24
2.2.2	Mounting plate of field housing	24
3	Installation	25
3.1	General notes on installation	25
3.2	Intended use	25
3.3	General requirements	25
3.3.1	Vibration	25
3.4	General requirements sensor	26
3.4.1	Inlet and outlet	26
3.4.2	Bends in 2 or 3 dimensions	27
3.4.3	T-section	27
3.4.4	Mounting position	28
3.4.5	Flange deviation	29
3.4.6	Control valve	29
3.4.7	Thermal insulation	30
3.4.8	Insulation for low temperature gas and cryogenic conditions	30
4	Electrical connections	31
4.1	Safety instructions	31
4.2	Connection of signal cable to signal converter	31
4.3	Power supply connection	32
4.4	Input and outputs, overview	34
4.4.1	Combinations of the inputs/outputs (I/Os)	34
4.4.2	Description of the CG number	35
4.4.3	Fixed, non-alterable input/output versions	36
4.4.4	Alterable input/output versions	37
5	Application form	38
6	Notes	40

## 1.1 Ultrasonic flowmeter for low-temperature gas and cryogenic conditions

The OPTISONIC 8300 offers a robust and accurate gas flow measurement based on ultrasonic transit time technology specially designed for high-temperature gas or superheated steam applications.


The OPTISONIC 8300 LT is a variant of the standard OPTISONIC 8300 and is specially modified for low design temperature applications.

The wetted / pressure bearing part of the transducer is standard made of SS347 and suitable for low temperatures down to  $-200^{\circ}\text{C}$  (flow sensor made from SS316 wetted materials).

It will not necessarily measure the flow at all low temperatures and pressures as this depends on the gas composition and the gas density. The measuring range needs to be checked with an OPTISONIC 8300 LT sizing tool, based on the process conditions and the gas type (for more information, consult factory).


As the ultrasonic piezo module is mounted on the outside end of the transducer, the temperature will be at a level where it will continue to operate while the process temperature is at its minimum of  $-200^{\circ}\text{C}$ .

The flow sensor minimum ambient temperature is designed for  $-30^{\circ}\text{C}$ , which is limited by the Ex-certification.

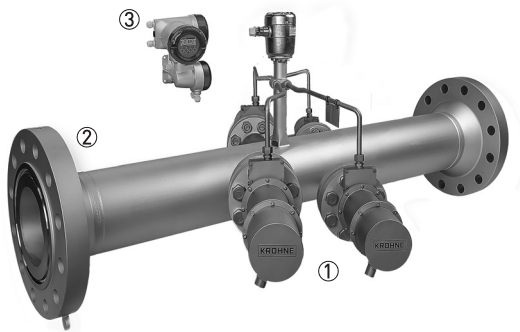

- ① Flow sensor with two parallel paths for optimal accuracy
- ② Flanged or weld-in design
- ③ Remote converter

The measuring system consist of an OPTISONIC 8000 flow sensor and a smart GFC 300 remote mounted signal converter with integrated flow computer functionalities and extensive self-diagnostics. With the available temperature and pressure inputs, the GFC 300 converter has the possibility to calculate mass flow and enthalpy in addition to the volumetric flow. This provides additional costs savings because there is no need for the added cost of a flow computer or external calculations.

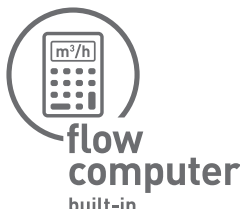

#### Flow computer built-in

Many KROHNE flowmeters have a built-in flow computer that compensates for the effects of pressure and temperature on the flow measurement or to convert to standard volume. This saves both cost and installation efforts for an external flow computer and provides for additional benefits.

### Highlights

- Full bore unobstructed and maintenance-free sensor tube
- Excellent long- term measurement stability, no drift over time
- Accurate bi-directional flow measurement with a wide dynamic flow range (60:1)
- Self-Diagnostics to monitor for correct operation and to support periodical verifications
- Integrated mass flow and enthalpy calculation according to IAPWS-IF97, using pressure and temperature input

### Industries

- Chemical and Petrochemical
- Power plants
- Refineries
- Tank terminals

### Applications


- High-temperature gas applications
- Allocation of steam production
- Custody transfer of steam
- Steam turbine performance management
- Custody transfer of steam
- Vent lines with hazardous area (zone 0) classification

## 1.2 Transducer modifications for Low Temperature version

The standard OPTISONIC 8300 transducer is used for the LT version, only the open cover housing with optimum natural cooling is replaced with a completely sealed cover housing.

When the pipe / gas is at low temperature, any ice forming by condensation of water from the ambient atmosphere at the transducer must be prevented. In order to achieve this a fully sealed cover is placed over the external transducer end (piezo module).

This fully sealed cover replaces the standard open cover and has a flexible volume using a PTFE-bellow to keep the pressure of the sealed cover the same as the atmospheric pressure. In this way the inner air conditions are constant and risk of ice forming at the piezo module is prevented.

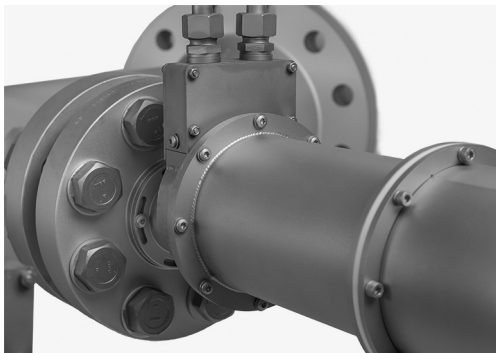

### 1.3 Options and variants

The OPTISONIC 8300 LT variant is designed for low temperature gas applications or to offer a mechanically safe design for very low temperature, cryogenic applications up to  $-200^{\circ}\text{C}$ .



#### Application range

- Diameter range DN100...600 / 4...24", extended range up to DN1000 / 40"
- Temperature up to  $540^{\circ}\text{C}$  /  $1004^{\circ}\text{F}$ , LT variant (low temperature) maximal  $340^{\circ}\text{C}$  /  $644^{\circ}\text{F}$
- Temperature range LT variant  $-200...+340^{\circ}\text{C}$  /  $-328...+644^{\circ}$
- Extended temperature up to  $593^{\circ}\text{C}$  /  $1100^{\circ}\text{F}$
- Pressure standard up to 100 bar / 1450 psi, extended pressure up to 200 bar / 2901 psi

#### Connection options

- Flangeless (weld-in) process connection
- Standard flange ratings available up to ASME 600 lbs / PN100
- Extended pressure versions up to 2500 lbs / PN250

#### Output options

- Flow speed and Actual Volume
- Velocity of sound of medium
- Mass flow and enthalpy by using the integrated flow computer option

#### Calibration

- Standard: air calibration
- Optional: Reynolds calibration on pressurized natural gas

#### Remote GFC 300 signal converter

- Display with 4 optical buttons
- I/O configurations available
- One universal software for all applications
- Monitoring Tool connection




## 1.4 Features



Highly accurate flow measurement  
Accuracy better than 1%, because of the two parallel path design.

### Velocity of Sound (VOS) monitoring

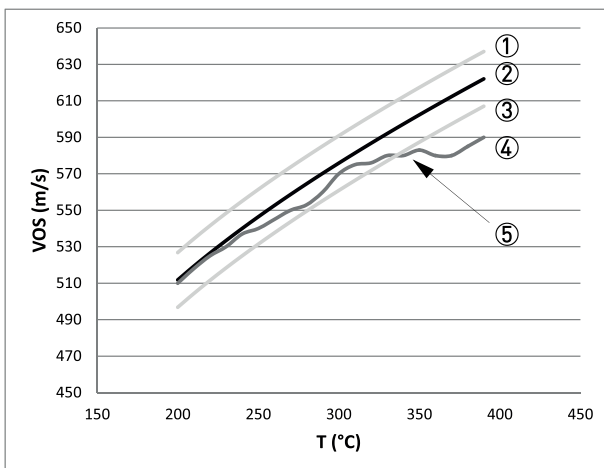


- ① VOS upper limit
- ② VOS calculated
- ③ VOS lower limit
- ④ VOS measured
- ⑤ VOS alarm trip

### Diagnostics for verification

The OPTISONIC 8300 provides a number of online diagnostic parameters and functions. For example since the process medium is known, the velocity of sound can be calculated with the input of temperature and pressure. The calculated velocity of sound can be monitored against the measured value. In this way not only the flow sensor is continuously diagnosed but also the temperature and the pressure sensor.

In addition, the diagnostics parameters can be used for in-situ verification of the steam flowmeter by comparing diagnostics values recorded at initial calibration or at commissioning, with actual values. In this way, an accurate and reliable measurement can be guaranteed continuously.

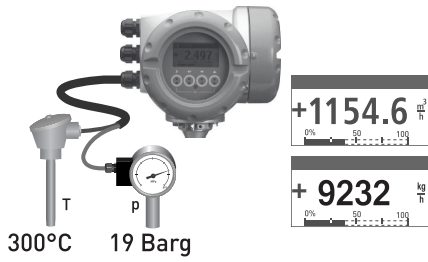

**Mass flow and energy flow calculation**  
 The OPTISONIC 8300 integrates the functionality of a flow computer in a flowmeter. Two optional current inputs for pressure and temperature allow the OPTISONIC 8300 to provide output like corrected volume flow, mass flow and energy flow. In case more flexibility or I/O options are required, the flowmeter can also be combined with the Summit flow computer.

ATEX / IECEx



ATEX / IEC-Ex certification incl. zone 0

When gas flow must be measured in vent lines where a combination of flammable gases and oxygen may occur, the OPTISONIC 8300 can be used since it is Ex certified for zone 0 inside the tube.

## 1.5 Measuring principle

- Like canoes crossing a river, acoustic signals are transmitted and received along a diagonal measuring path.
- A sound wave going downstream with the flow travels faster than a sound wave going upstream against the flow.
- The difference in-transit time is directly proportional to the mean flow velocity of the medium.

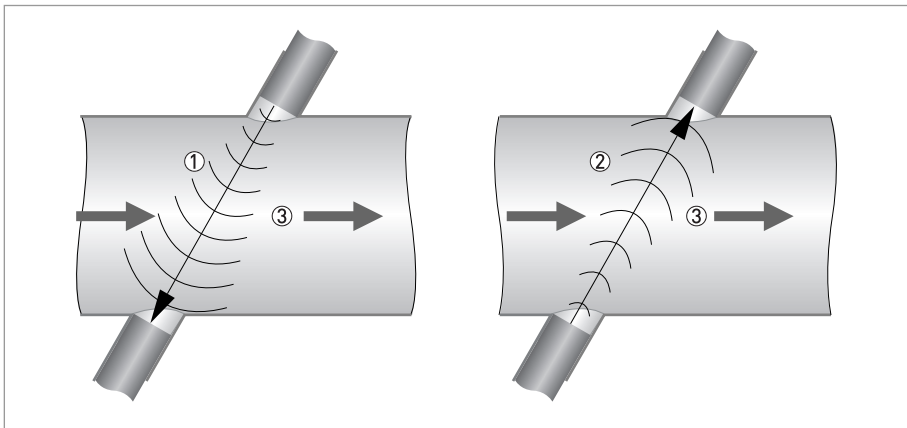


Figure 1-1: Measuring principle

- ① Sound wave against the flow direction
- ② Sound wave with the flow direction
- ③ Flow direction

## 2.1 Technical data

- The following data is provided for general applications. If you require data that is more relevant to your specific application, please contact us or your local sales office.
- Additional information (certificates, special tools, software,...) and complete product documentation can be downloaded free of charge from the website (Downloadcenter).

### Measuring system

Measuring principle	Ultrasonic transit time
Application range	Flow measurement of hot or low temperature gases and superheated steam
Measured value	
Primary measured values	Transit time
Secondary measured values	Volume flow, corrected volume flow, mass flow, molar mass, flow speed, flow direction, velocity of sound, gain, signal to noise ratio, reliability of flow measurement, totalised volume or mass

### Design

Features	1 or 2 parallel acoustic path(s), fully welded flow sensor with flanged mounted High Temperature transducers.
Modular construction	The measurement system consists of a flow sensor and a signal converter.
Remote version	In field (F) mount version: OPTISONIC 8000 F flow sensor with remote installed GFC 300 F signal converter.
Nominal diameter	1 path: DN100 / 4" 2 paths: DN150...600 / 6...24" On request: DN700...1000 / 28...40"
Measurement range	1...60 m/s / 3...197 ft/s, bi-directional (depending on gas density)
Input / output options	
Inputs/outputs	Current output (including HART®), pulse output, frequency output and/or status output, limit switch and/or control input, current inputs (depending on the I/O version)
Counters	2 internal counters with a max. of 8 counter places (e.g. for counting volume and/or mass units).
Self-diagnostics	Integrated verification, diagnosis functions, flowmeter, process, measured value, bar graph
Communication interfaces	HART®, Foundation Fieldbus, Modbus RS485

Display and user interface	
Graphic display	LC display, backlit white, display turnable in 90° steps.
	Size: 128 x 64 pixels, corresponds to 59 x 31 mm = 2.32" x 1.22"
	Ambient temperatures below -25°C/ -13°F, may affect the readability of the display.
Operator elements	4 optical buttons for operator control of the signal converter without opening the housing.
	Option: infrared interface for reading and writing all parameters with IR interface without opening the housing.
Remote control	PACTware™ including Device Type Manager (DTM)
	HART® Hand Held Communicator from Emerson Process
	AMS® from Emerson Process
	PDM® from Siemens
	All DTM's and drivers are available free of charge from the manufacturer's website.
Display functions	
Operating menu	Setting the parameters using 2 measured value pages, 1 status page, 1 graphics page (measured values and graphics are freely adjustable).
Language of display texts	Available languages: English, French, German, Russian
Measurement functions	Units: Metric, British and US units selectable from list / free unit.
	Measured values: volume flow, corrected volume flow, mass flow, flow speed, velocity of sound, gain, signal to noise ratio, flow direction, diagnostics.

## Measuring accuracy

Volume flow	
Reference conditions for calibration	Medium: air
	Temperature: 20°C / 68°F
	Pressure: 1 bar / 14.5 psi
	Reynold > 10000
Air calibration (standard)	DN100 / 4": < ± 1.5% of actual measured flow rate
	DN150...600 / 6...24": < ± 1% of actual measured flow rate
Repeatability	< ± 0.2%
Mass flow	
Reference conditions for calibration	Medium: Pressurised Natural Gas
	Temperature: depending on calibration
	Pressure: depending on calibration
Pressurised natural gas calibration (optional)	Calculations and correction in GFC 300 signal converter or Summit flow computer
	DN100 / 4": ≤ ± 1.5% of actual measured mass flow
	DN150...600 / 6...24": ≤ ± 1% of actual measured mass flow
Repeatability	< ± 0.2%

## Operating conditions

Temperature	
Refer to the Ex addendum for details on maximum ambient and process temperatures allowed.	
Process temperature	Standard HT version: -25...+540°C / -13...+1004°F
	Extended HT version (option): -25...+593°C / -13...+1100°F
	LT (low temperature) version: -200...+340°C / -328...+644°F
Ambient temperature	Flow sensor (standard version): -40...+70°C / -40...+158°F
	Flow sensor (LT version): -30...+70°C / -22...+158°F
	Converter with aluminum housing: -40...+65°C / -40...+149°F
	Converter with a stainless steel housing: -40...+60°C / -40...+131°F
	Ambient temperatures below -25°C / -13°F may affect the readability of the display.
Protect the signal converter from external heat sources such as direct sunlight, as higher temperatures reduce the life cycle of all electronic components.	
Storage temperature	-50...+70°C / -58...+158°F
Pressure	
Flanged	According to flange type and rating, maximum pressure limited
Flangeless (weld in) connection	According to design pressure
Transducer design	SS347: 100 barg +540°C / 1465 psia at +1004°F
	INCONEL <sup>®</sup> Alloy 625: 200 barg at 593°C / 2930 psia +1100°F
Properties of medium	
Physical condition	Superheated steam (>15°C / 59°F overheated), high-temperature gas, cryogenic gas
Density	Standard: 0.6...150 kg/m <sup>3</sup> / 0.037...9.36 lb/ft <sup>3</sup>

**Installation conditions**

Installation	For detailed information see chapter "Installation".
Inlet run	≥ 20 DN
Outlet run	≥ 3 DN
Dimensions and weights	For detailed information see chapter "Dimensions and weights".

**Materials**

Flow sensor	
Flanges	Standard: carbon steel ASTM A105 N
	Optional: stainless steel 316 / 1.4408
	On request: high-temperature steel like for example F-11, F-22.
Sensor conduits	Stainless steel 316 L / 1.4404
Sensor neck	Stainless steel AISI 316 / 1.4408
Tube and transducer nozzles	Standard: carbon steel ASTM A106 Gr. B or equivalent
	Optional: stainless steel 316 / 1.4408
	For flangeless design: according to pipe specification
	On request: high-temperature steel like for example P-11, P-22
Transducers	Standard: stainless steel 347 (UNS S34700, W. nr.:1.4550)
	Optional high pressure: INCONEL <sup>®</sup> Alloy 625 (UNS N06625, W. nr.: 2.4856)
Transducer covers	Standard HT version: open covers in stainless steel 316 L / 1.4404 for natural cooling
	LT version: closed sealed covers in stainless steel 316 L / 1.4404
Connection box	Stainless steel AISI 316 / 1.4408
Coating (flow sensor)	Standard: blasted, corrosion preservative in and outside for carbon steel.
	Optional: high temperature coating
NACE conformity	Optional wetted materials conform NACE MR0175/0103
Signal converter housing	
Field version (only)	Signal converter: die-cast aluminium housing
	Optional: stainless steel housing 316 / 1.4408
	Console: stainless steel 316 / 1.4408
Coating (converter housing)	Powder coated (epoxy primer and polyester topcoat)
	Stainless steel housing: uncoated
	On request: offshore coating / customer specific coating

## Electrical connections

Power supply	Standard
	100...230 VAC (-15% / +10%), 50/60 Hz
	Option
	24 VDC (-55% / +30%) 24 VAC/DC (AC: -15% / +10%; DC: -25% / +30%)
Power consumption	AC: 22 VA
	DC: 12 W
Signal cable	Shielded cable with 2 triax cores, 1 cable per path: Ø 10.6 mm / 0.4".
	Class 1 Div 1/2: single coax cables for fitting in conduit (2 per acoustic path).
	5 m / 16 ft
	Option: max. 30 m / 90 ft
Cable entries	Standard: M20 x 1.5 (8...12 mm)
	Option: ½" NPT, PF ½ adapter

## Inputs and outputs

General	All inputs and outputs are galvanically isolated from each other and from all other circuits		
	All operating data and output values can be adjusted.		
Description of used abbreviations	$V_{int}$ = internal voltage; $V_{ext}$ = external voltage; $R_L$ = resistance of load; $V_{nom}$ = nominal voltage $V_0$ = terminal voltage; $I_{nom}$ = nominal current Safety limit values (Ex i): $V_i$ = max. input voltage; $I_i$ = max. input current; $P_i$ = max. input power rating; $C_i$ = max. input capacity; $L_i$ = max. input inductivity		
Current output			
Output data	Measurement of volume flow, corr. volume flow, mass flow, molar mass, flow speed, velocity of sound, gain, diagnostics 1, 2, 3, HART <sup>®</sup> communication.		
Temperature coefficient	Typically $\pm 30$ ppm/K		
Settings	Without HART <sup>®</sup>		
	Q = 0%: 0...15 mA		
	Q = 100%: 10...20 mA		
	Error identification: 3...22 mA		
	With HART <sup>®</sup>		
	Q = 0%: 4...15 mA		
	Q = 100%: 10...20 mA		
	Error identification: 3.5...22 mA		
Operating data	Basic I/Os	Modular I/Os	Ex i
Active	$V_{int} = 24$ VDC		$V_{int} = 20$ VDC
	$I \leq 22$ mA		$I \leq 22$ mA
Passive	$R_L \leq 1$ k $\Omega$		$R_L \leq 450$ $\Omega$
			$V_0 = 21$ V $I_0 = 90$ mA $P_0 = 0.5$ W $C_0 = 90$ nF / $L_0 = 2$ mH $C_0 = 110$ nF / $L_0 = 0.5$ mH
Passive	$V_{ext} \leq 32$ VDC		$V_{ext} \leq 32$ VDC
	$I \leq 22$ mA		$I \leq 22$ mA
Passive	$V_0 \geq 1.8$ V		$V_0 \geq 4$ V
	$R_L \leq (V_{ext} - V_0) / I_{max}$		$R_L \leq (V_{ext} - V_0) / I_{max}$
Passive			$V_I = 30$ V $I_I = 100$ mA $P_I = 1$ W $C_I = 10$ nF $L_I = 0$ mH

HART®			
Description	HART® protocol via active and passive current output		
	HART® version: V5		
	Optional: HART® version: V7		
	Universal HART® parameter: completely integrated		
Load	≥ 250 Ω at HART® test point Note maximum load for current output!		
Multidrop	Yes, current output = 4 mA		
	Multidrop addresses adjustable in operation menu 1...15		
Device drivers	HART®, AMS DD / FDT / DTM		
Pulse or frequency output			
Output data	Pulse output: volume, enthalpy or mass flow		
	Frequency output: volume flow, enthalpy flow, mass flow, specific enthalpy, density, flow speed, velocity of sound, gain		
Function	Adjustable as pulse or frequency output		
Settings	For Q = 100%: 0.01... 10000 pulses per second or pulses per unit volume.		
	Pulse width: adjustable as automatic, symmetric or fixed (0.05...2000 ms)		
Operating data	Basic I/Os	Modular I/Os	Ex i
Active	-	$V_{int} = 24 \text{ VDC}$  $f_{max}$ in operating menu set to: $f_{max} \leq 100 \text{ Hz}$  $I \leq 20 \text{ mA}$  $R_{L, max} = 47 \text{ k}\Omega$  open: $I \leq 0.05 \text{ mA}$ closed: $V_{0, nom} = 24 \text{ V}$ at $I = 20 \text{ mA}$	-
		$f_{max}$ in operating menu set to: $100 \text{ Hz} < f_{max} \leq 10 \text{ kHz}$  $I \leq 20 \text{ mA}$  $R_L \leq 10 \text{ k}\Omega$ for $f \leq 1 \text{ kHz}$ $R_L \leq 1 \text{ k}\Omega$ for $f \leq 10 \text{ kHz}$  open: $I \leq 0.05 \text{ mA}$ closed: $V_{0, nom} = 22.5 \text{ V}$ at $I = 1 \text{ mA}$ $V_{0, nom} = 21.5 \text{ V}$ at $I = 10 \text{ mA}$ $V_{0, nom} = 19 \text{ V}$ at $I = 20 \text{ mA}$	

Passive	$V_{\text{ext}} \leq 32 \text{ VDC}$ $f_{\text{max}}$ in operating menu set to: $f_{\text{max}} \leq 100 \text{ Hz}$ $I \leq 100 \text{ mA}$ $R_{L, \text{max}} = 47 \text{ k}\Omega$ $R_{L, \text{max}} = (V_{\text{ext}} - V_0) / I_{\text{max}}$ open: $I \leq 0.05 \text{ mA}$ at $V_{\text{ext}} = 32 \text{ VDC}$ closed: $V_{0, \text{max}} = 0.2 \text{ V}$ at $I \leq 10 \text{ mA}$ $V_{0, \text{max}} = 2 \text{ V}$ at $I \leq 100 \text{ mA}$		-
NAMUR	-	Passive to EN 60947-5-6 open: $I_{\text{nom}} = 0.6 \text{ mA}$ closed: $I_{\text{nom}} = 3.8 \text{ mA}$	Passive to EN 60947-5-6 open: $I_{\text{nom}} = 0.43 \text{ mA}$ closed: $I_{\text{nom}} = 4.5 \text{ mA}$ $V_1 = 30 \text{ V}$ $I_1 = 100 \text{ mA}$ $P_1 = 1 \text{ W}$ $C_1 = 10 \text{ nF}$ $L_1 = 0 \text{ mH}$

Status output / limit switch			
Function and settings	Settable as indicator for direction of flow, overflow, error, operating point.		
	Status and/or control: ON or OFF		
Operating data	Basic I/Os	Modular I/Os	Ex i
Active	-	$V_{int} = 24 \text{ VDC}$ $I \leq 20 \text{ mA}$ $R_{L, max} = 47 \text{ k}\Omega$ open: $I \leq 0.05 \text{ mA}$ closed: $V_{0, nom} = 24 \text{ V}$ at $I = 20 \text{ mA}$	-
Passive	$V_{ext} \leq 32 \text{ VDC}$ $I \leq 100 \text{ mA}$ $R_{L, max} = 47 \text{ k}\Omega$ $R_{L, max} = (V_{ext} - V_0) / I_{max}$ open: $I \leq 0.05 \text{ mA}$ at $V_{ext} = 32 \text{ VDC}$ closed: $V_{0, max} = 0.2 \text{ V}$ at $I \leq 10 \text{ mA}$ $V_{0, max} = 2 \text{ V}$ at $I \leq 100 \text{ mA}$	$V_{ext} \leq 32 \text{ VDC}$ $I \leq 100 \text{ mA}$ $R_{L, max} = 47 \text{ k}\Omega$ $R_{L, max} = (V_{ext} - V_0) / I_{max}$ open: $I \leq 0.05 \text{ mA}$ at $V_{ext} = 32 \text{ VDC}$ closed: $V_{0, max} = 0.2 \text{ V}$ at $I \leq 10 \text{ mA}$ $V_{0, max} = 2 \text{ V}$ at $I \leq 100 \text{ mA}$	-
NAMUR	-	Passive to EN 60947-5-6	Passive to EN 60947-5-6
		open: $I_{nom} = 0.6 \text{ mA}$ closed: $I_{nom} = 3.8 \text{ mA}$	open: $I_{nom} = 0.43 \text{ mA}$ closed: $I_{nom} = 4.5 \text{ mA}$ $V_I = 30 \text{ V}$ $I_I = 100 \text{ mA}$ $P_I = 1 \text{ W}$ $C_I = 10 \text{ nF}$ $L_I = 0 \text{ mH}$

Control input			
Function	Set value of the outputs to "zero", counter and error reset, range change.		
Operating data	Basic I/Os	Modular I/Os	Ex i
Active	-	$V_{int} = 24 \text{ VDC}$ Terminals open: $V_{0, nom} = 22 \text{ V}$ Terminals bridged: $I_{nom} = 4 \text{ mA}$ On: $V_0 \leq 10 \text{ V}$ with $I_{nom} = 1.9 \text{ mA}$ Off: $V_0 \geq 12 \text{ V}$ with $I_{nom} = 1.9 \text{ mA}$	-
Passive	$V_{ext} \leq 32 \text{ VDC}$ $I_{max} = 6.5 \text{ mA}$ at $V_{ext} \leq 24 \text{ VDC}$ $I_{max} = 8.2 \text{ mA}$ at $V_{ext} \leq 32 \text{ VDC}$ Contact closed (On): $V_0 \geq 8 \text{ V}$ with $I_{nom} = 2.8 \text{ mA}$ Contact open (Off): $V_0 \leq 2.5 \text{ V}$ with $I_{nom} = 0.4 \text{ mA}$	$V_{ext} \leq 32 \text{ VDC}$ $I_{max} = 9.5 \text{ mA}$ at $V_{ext} \leq 24 \text{ V}$ $I_{max} = 9.5 \text{ mA}$ at $V_{ext} \leq 32 \text{ V}$ Contact closed (On): $V_0 \geq 3 \text{ V}$ with $I_{nom} = 1.9 \text{ mA}$ Contact open (Off): $V_0 \leq 2.5 \text{ V}$ with $I_{nom} = 1.9 \text{ mA}$	$V_{ext} \leq 32 \text{ VDC}$ $I \leq 6 \text{ mA}$ at $V_{ext} = 24 \text{ V}$ $I \leq 6.6 \text{ mA}$ at $V_{ext} = 32 \text{ V}$ On: $V_0 \geq 5.5 \text{ V}$ or $I \geq 4 \text{ mA}$ Off: $V_0 \leq 3.5 \text{ V}$ or $I \leq 0.5 \text{ mA}$ $V_I = 30 \text{ V}$ $I_I = 100 \text{ mA}$ $P_I = 1 \text{ W}$ $C_I = 10 \text{ nF}$ $L_I = 0 \text{ mH}$
NAMUR	-	Active to EN 60947-5-6 Contact open: $V_{0, nom} = 8.7 \text{ V}$ Contact closed (On): $I_{nom} = 7.8 \text{ mA}$ Contact open (off): $V_{0, nom} = 6.3 \text{ V}$ with $I_{nom} = 1.9 \text{ mA}$ Identification for open terminals: $V_0 \geq 8.1 \text{ V}$ with $I \leq 0.1 \text{ mA}$ Identification for short circuited terminals: $V_0 \leq 1.2 \text{ V}$ with $I \geq 6.7 \text{ mA}$	-

Low-flow cutoff			
On	0...±9.999 m/s; 0...20.0%, settable in 0.1% steps, separately for each current and pulse output.		
Off	0...±9.999 m/s; 0...19.0%, settable in 0.1% steps, separately for each current and pulse output.		
Time constant			
Function	Can be set together for all flow indicators and outputs, or separately for: current, pulse and frequency output, and for limit switches and the 3 internal counters.		
Time setting	0...100 seconds, settable in 0.1-second steps.		
Current input			
Function	For conversion to standard conditions, input from external temperature and pressure transmitters is required.		
Operating data	Basic I/Os	Modular I/Os	Ex i
Active	-	$V_{int} = 24 \text{ VDC}$	$V_{int} = 20 \text{ VDC}$
		$I \leq 22 \text{ mA}$	$I \leq 22 \text{ mA}$
		$I_{max} \leq 26 \text{ mA}$ (electronically limited)	$V_{0, min} = 14 \text{ V}$ at $I \leq 22 \text{ mA}$
		$V_{0, min} = 19 \text{ V}$ at $I \leq 22 \text{ mA}$	No HART®
Passive	-	No HART®	$V_0 = 24.1 \text{ V}$ $I_0 = 99 \text{ mA}$ $P_0 = 0.6 \text{ W}$ $C_0 = 75 \text{ nF} / L_0 = 0.5 \text{ mH}$
		No HART®	No HART®
		$V_{ext} \leq 32 \text{ VDC}$	$V_{ext} \leq 32 \text{ VDC}$
		$I \leq 22 \text{ mA}$	$I \leq 22 \text{ mA}$
Passive	-	$I_{max} \leq 26 \text{ mA}$ (electronically limited)	$V_{0, min} = 4 \text{ V}$ at $I \leq 22 \text{ mA}$
		$V_{0, min} = 5 \text{ V}$ at $I \leq 22 \text{ mA}$	No HART®
		No HART®	$V_I = 30 \text{ V}$ $I_I = 100 \text{ mA}$ $P_I = 1 \text{ W}$ $C_I = 10 \text{ nF}$ $L_I = 0 \text{ mH}$
		No HART®	No HART®

FOUNDATION Fieldbus	
Description	Galvanically isolated according to IEC 61158
	Current consumption: 10.5 mA
	Permissible bus voltage: 9...32 V; in Ex application: 9...24 V
	Bus interface with integrated reverse polarity protection
	Link Master function (LM) supported
	Tested with Interoperable Test Kit (ITK) version 5.2
Function blocks	6 x analogue input (AI), 2 x integrator, 1 x PID, 1 x arithmetic
Output data	Volume flow, corr. volume flow, mass flow, molar mass, enthalpy flow, spec. enthalpy, density, flow speed, process temperature, process pressure, electronic temperature, velocity of sound (av.), gain (av.), SNR (av.), velocity of sound 1-3, gain 1-3, SNR 1-3

MODBUS	
Description	Modbus RTU, Master / Slave, RS485
Address range	1...247
Supported function codes	03, 04, 16
Broadcast	Supported with function code 16
Supported Baudrate	1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 Baud

### Approvals and certificates

CE	
This device fulfils the statutory requirements of the relevant directives. The manufacturer certifies successful testing of the product by applying the conformity mark on the device.	
	For more information on the directives, standards and the approved certifications, please refer to the declaration of conformity supplied with the device or downloadable from the manufacturer's website.
Hazardous areas	
Non-Ex	Standard
Ex zone 1 - 2	For detailed information, please refer to the relevant Ex documentation. According to European directive 2014/34/EU / UK-Regulation 2016 No. 1107.
IECEX	OPTISONIC 8000: KIWA 17.0011 X
	GFC 300 F: KIWA 17.0001X
ATEX	OPTISONIC 8000: KIWA ATEX 17.0025 X
	GFC 300 F: KIWA ATEX 170002 X
Class 1, Div 2	cQPSus LR 1338-7R1
NEPSI	OPTISONIC 8000: GYJ23.1273X
	GFC 300: GYJ23.1274X
Other approvals and standards	
NAMUR	NE 21, 43, 53, 80
Protection category acc. to IEC 60529	Signal converter: Field (F) version, IP66/67, NEMA 4X/6
	All flow sensors: IP67, NEMA 6
Vibration resistance	IEC 60068-2-64
	f = 20...2000Hz, rms = 4.5g, t = 30min

## 2.2 Dimensions and weight

The OPTISONIC 8300 is available as weld-in or flanged version. The design of the tube of the flowmeter will be based on the specifications of the connecting piping. Detailed information for the dimensions and weights cannot be specified as they will vary with each application. The information below should therefore be regarded as indicative.

Please note size d, the required extra space for installation and maintenance of the transducers.

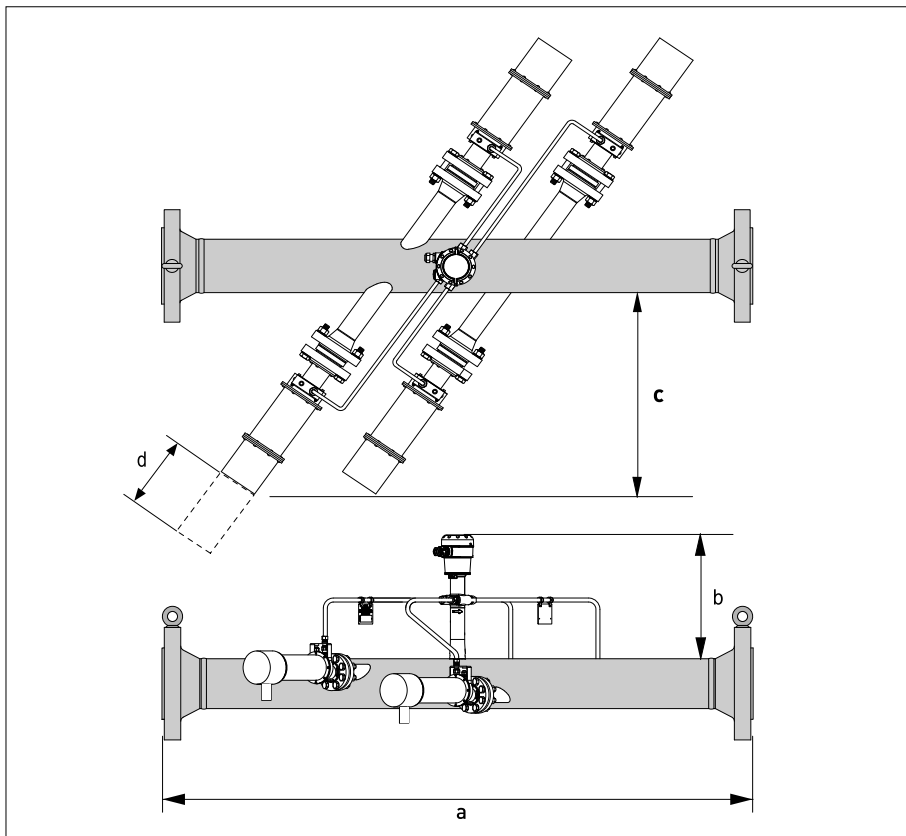


Figure 2-1: Top and front view of the OPTISONIC 8000 LT

OPTISONIC 8300 LT	[mm]	[inches]
a	DN100 / 4": 1000	DN100 / 4": 39.37
	DN150...600 / 6...24": 2000	DN150...600 / 6...24": 78.74
b	414	16.3
c	Transducer flange rating 600 lbs: 720	600 lbs: 28.35
d	250	9.84

Table 2-1: Dimensions of the OPTISONIC 8000 LT in mm and inches

### 2.2.1 Converter housing

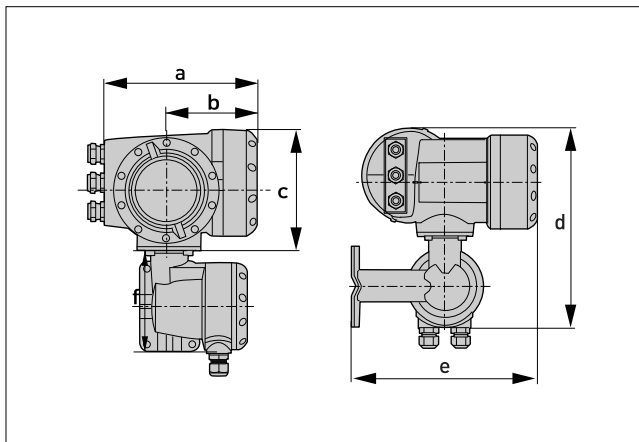


Figure 2-2: Field housing (F) - remote version.

Dimensions [mm]					Weight [kg]
a	b	c	d	e	
202	120	155	295.8	277	5.7

Table 2-2: Dimensions and weights in mm and kg

Dimensions [inches]					Weight [lb]
a	b	c	d	e	
7.75	4.75	6.10	11.60	10.90	12.60

Table 2-3: Dimensions and weights in inches and lb

### 2.2.2 Mounting plate of field housing

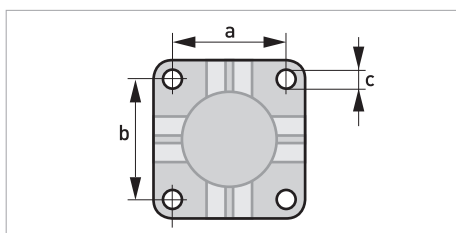


Figure 2-3: Dimensions for mounting plate of field housing

	[mm]	[inch]
a	72	2.8
b	72	2.8
c	Ø9	Ø0.4

Table 2-4: Dimensions in mm and inch

### 3.1 General notes on installation

Inspect the packaging carefully for damages or signs of rough handling. Report damage to the carrier and to the local office of the manufacturer.

Do a check of the packing list to make sure that you have all the elements given in the order.

Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.

### 3.2 Intended use

Responsibility for the use of the measuring devices with regard to suitability, intended use and corrosion resistance of the used materials against the measured fluid lies solely with the operator.

The manufacturer is not liable for any damage resulting from improper use or use for other than the intended purpose.

The OPTISONIC 8300 LT variant is designed for measurement of low temperature gases up to cryogenic conditions. The mechanical design is based on the design pressures and temperatures down to  $-200^{\circ}\text{C}$  /  $-328^{\circ}\text{F}$ . The measuring range in cryogenic conditions depends on the gas type and gas density in combination with line size.

### 3.3 General requirements

The following precautions must be taken to ensure a reliable installation.

- Make sure that there is adequate space on the sides.
- Protect the signal converter from direct sunlight and install a sunshade if necessary.
- Signal converters installed in control cabinets require adequate cooling, e.g. by fan or heat exchanger.
- Do not expose the signal converter to intense vibrations and mechanical shocks. The measuring devices are tested for a vibration/shock level as described in the chapter "Technical data".

#### 3.3.1 Vibration

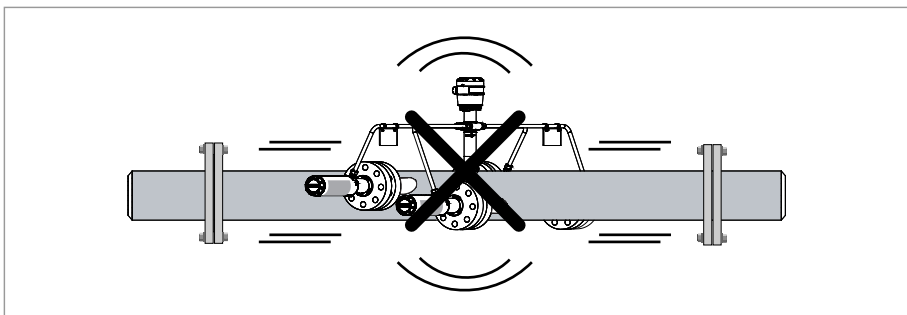


Figure 3-1: Prevent intense vibrations

In case of too many vibrations, please install supports on both sides of the flowmeter to minimize movement.

### 3.4 General requirements sensor

To secure the optimum functioning of the flowmeter, please note the following observations.

- Install the flow sensor in a horizontal position in a slightly descending line.
- Do not install the flow sensor in a lowered pipe section to avoid that water can collect in the measuring tube.
- Orientate the flow sensor such that the path of the acoustic signal is in the horizontal plane.

For exchanging the transducers, please keep a free space of 0.3 m / 11.81" around the transducer.

#### 3.4.1 Inlet and outlet

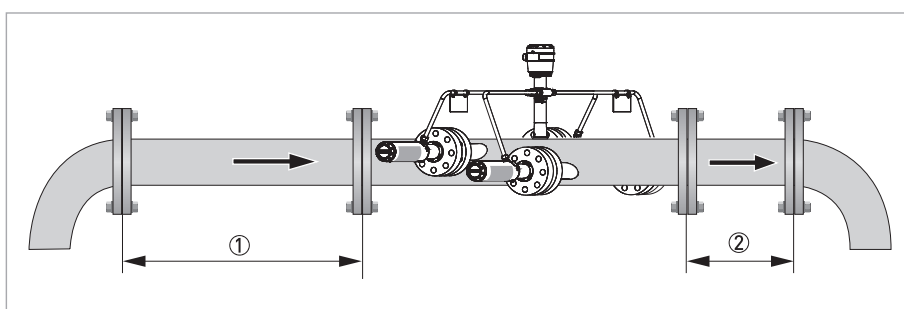


Figure 3-2: Recommended inlet and outlet

- ① Refer to chapter "Bends in 2 or 3 dimensions"
- ②  $\geq 3$  DN

### 3.4.2 Bends in 2 or 3 dimensions

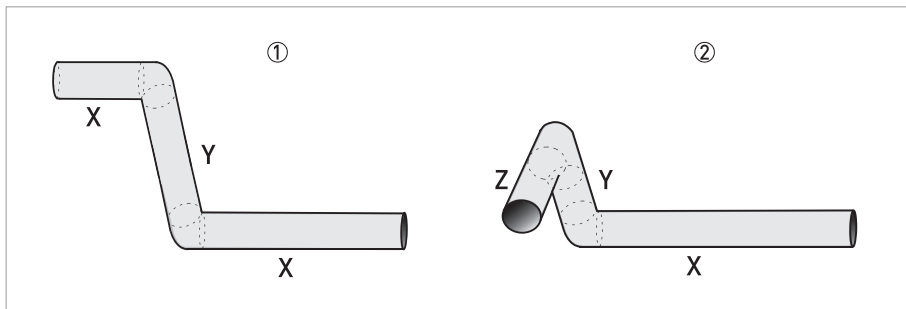


Figure 3-3: 2 and/or 3 dimensional bends upstream of the flowmeter

① 2 dimensions = X/Y

② 3 dimensions = X/Y/Z

Inlet length:

for 2 path using bends in 2 or 3 dimensions:  $\geq 20$  DN;

for 1 path using bends in 2 or 3 dimensions:  $\geq 30$  DN

Shorter inlet conditions ( $< 20$  DN) are depending on the upstream pipe configuration.

2 dimensional bends occur in a vertical or horizontal plane (X/Y) only, while 3 dimensional bends occur in both vertical and horizontal plane (X/Y/Z).

### 3.4.3 T-section

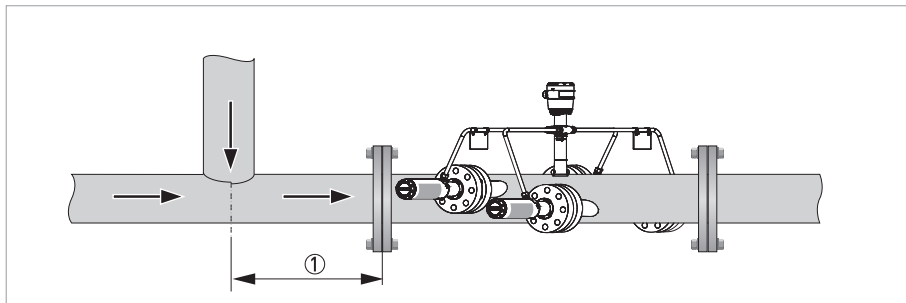


Figure 3-4: Distance behind a T-section

①  $\geq 20$  DN

### 3.4.4 Mounting position

- Install the flowmeter in horizontal position only in case of the presence of liquids and/or in steam applications.
- Horizontal or vertical installation position in case of dry gas.

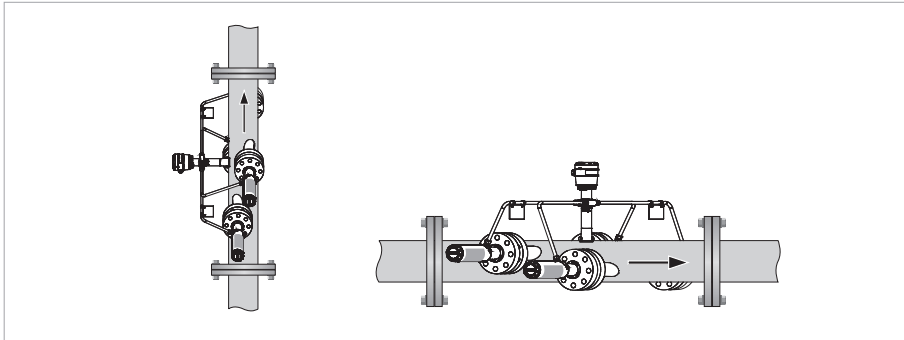


Figure 3-5: Horizontal or vertical installation

- In case of the presence of liquid or steam applications

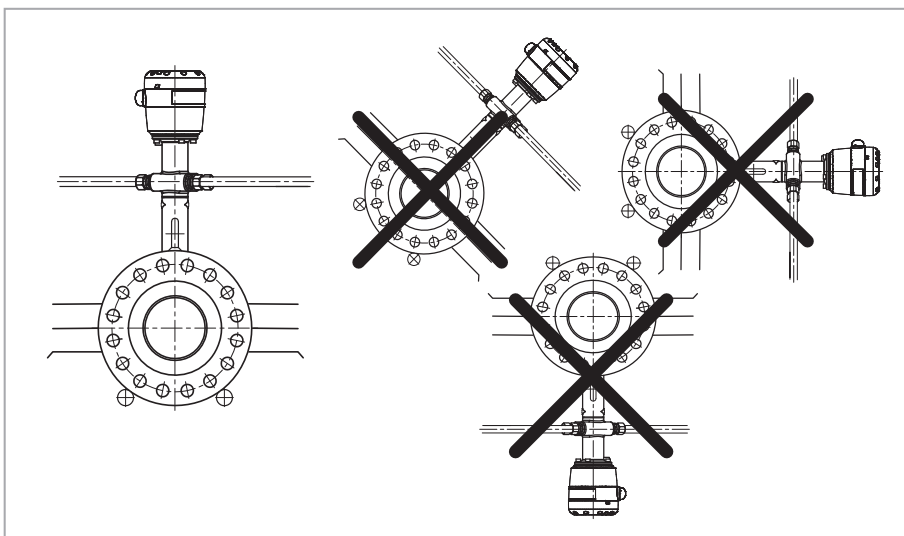


Figure 3-6: Mounting position

Orientate connection box upwards and acoustic path(s) horizontally to avoid liquid in transducers.

### 3.4.5 Flange deviation

Max. permissible deviation of pipe flange faces:

$$L_{\max} - L_{\min} \leq 0.5 \text{ mm} / 0.02''$$

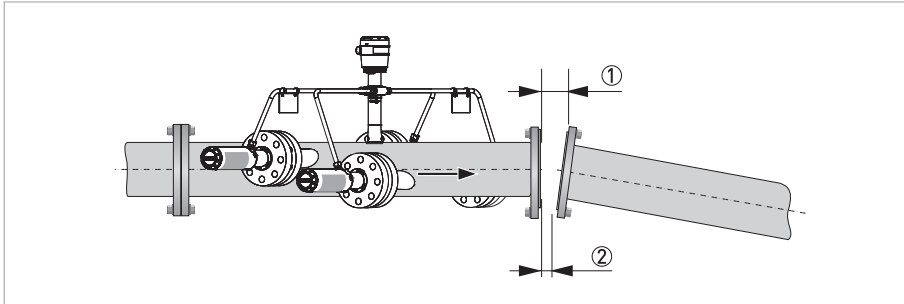


Figure 3-7: Flange deviation

- ①  $L_{\max}$
- ②  $L_{\min}$

### 3.4.6 Control valve

When a restriction (valve or reducer) is installed in the same pipeline with the flowmeter and noise is expected, please contact the manufacturer.

To prevent flow disturbances in the flowmeter a control valve is installed downstream of the flowmeter.

If a control valve is installed upstream of the flowmeter position, an extended straight inlet pipe (up to 50 DN) is recommended, depending on the process and control valve type.

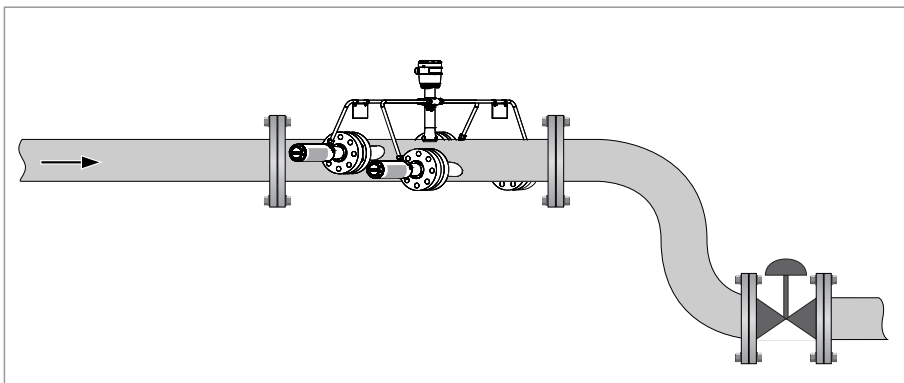


Figure 3-8: Recommended installation of the control valve

### 3.4.7 Thermal insulation

Recommended insulation plan with mineral wool is depending on the operating temperatures and both the gas and ambient conditions.

For devices in a hazardous area, additional maximum temperature and insulation precautions apply. Please refer to the Ex documentation.

### 3.4.8 Insulation for low temperature gas and cryogenic conditions

When the maximum process temperature exceeds  $+150^{\circ}\text{C}$  /  $+302^{\circ}\text{F}$ , the sealed cover housing of the transducers must be kept free from insulation to have a cooling for the electronic parts of the transducer.

Ice forming on the sealed cover has to be prevented for a correct functionality, depending on the temperatures and humidity an electrical tracing may be required!

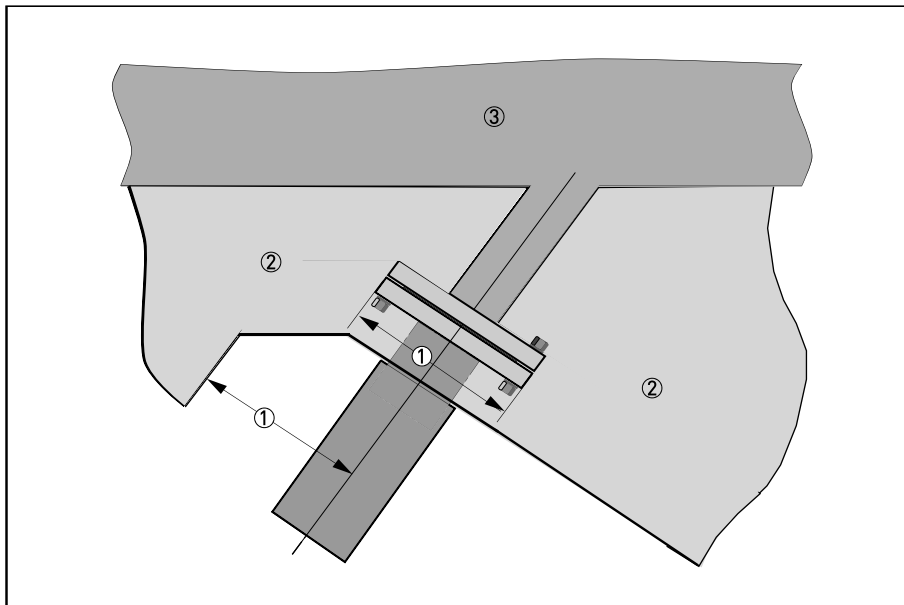


Figure 3-9: Thermal insulation cryogenic application

- ① Width of flange = free distance to insulation
- ② Insulation for  $T_{\text{process}}$  up to  $+250^{\circ}\text{C}$  /  $+482^{\circ}\text{F}$
- ③ Sensor tube

Additional insulation when liquid condensation at the transducer needs to be avoided (consult factory)

## 4.1 Safety instructions

All work on the electrical connections may only be carried out with the power disconnected. Take note of the voltage data on the nameplate!

Observe the national regulations for electrical installations!

For devices used in hazardous areas, additional safety notes apply; please refer to the Ex documentation.

Observe without fail the local occupational health and safety regulations. Any work done on the electrical components of the measuring device may only be carried out by properly trained specialists.

Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.

## 4.2 Connection of signal cable to signal converter

The flow sensor is connected to the signal converter via one or two signal cables, with 2 inner Triax cables for the connection of one or two acoustic path(s). A flow sensor with one acoustic path has one cable. A flow sensor with two acoustic paths has two cables.

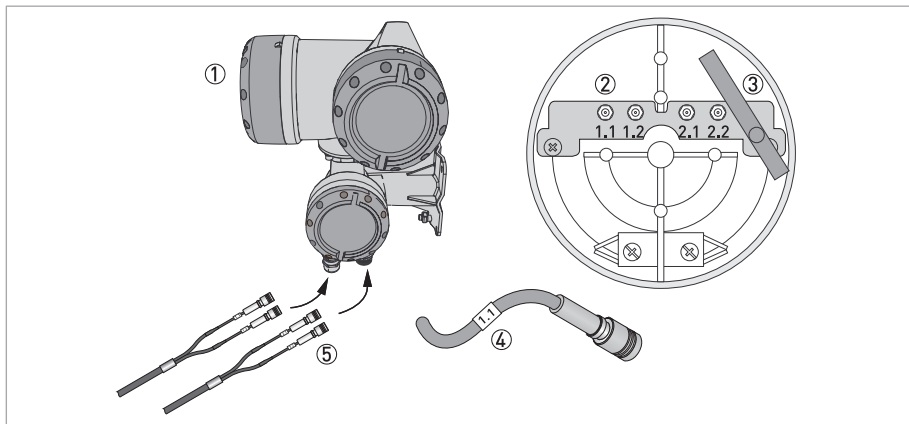


Figure 4-1: Connection of signal cable to signal converter

- ① Signal converter
- ② Open connection box
- ③ Tool for releasing connectors
- ④ Marking on cable
- ⑤ Insert cable [1 path flowmeter] or cables [2 path flowmeter] through cable glands

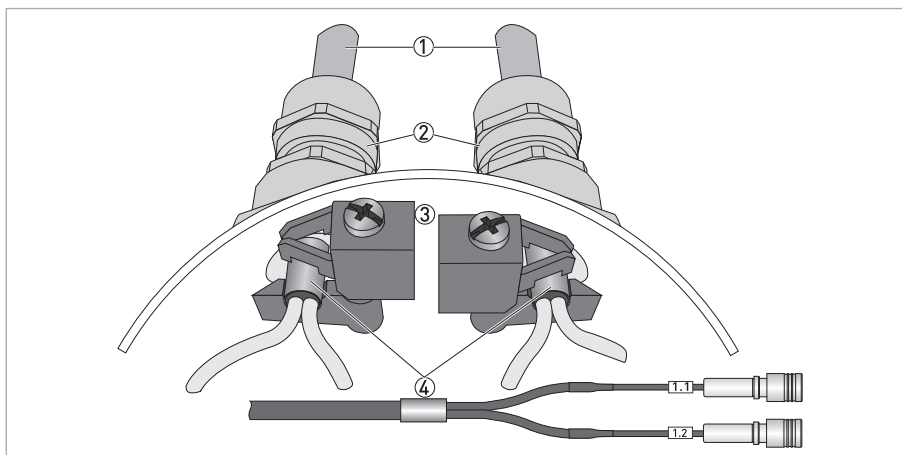


Figure 4-2: Clamp the cables on the shielding bush

- ① Cables
- ② Cable glands
- ③ Grounding clamps
- ④ Cable with metal shielding bush

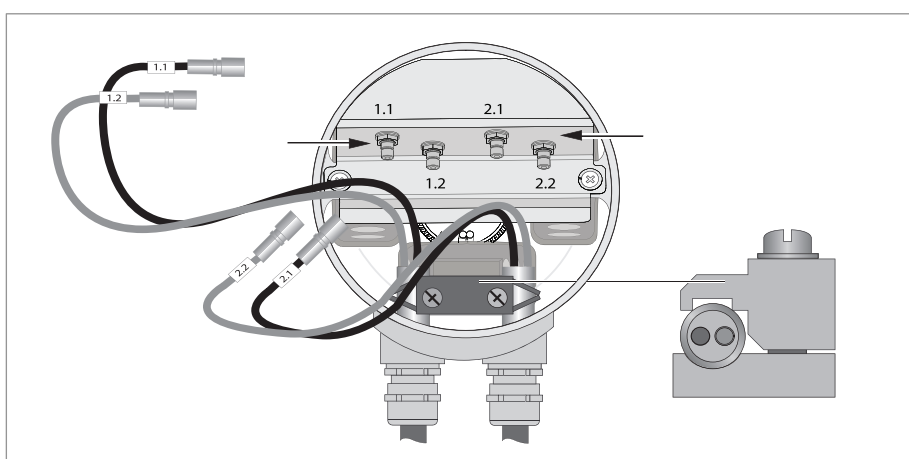


Figure 4-3: Connect the cables in the connection box of the sensor

Connect the cable on connector with similar numeral marking

### 4.3 Power supply connection

For devices used in hazardous areas, additional safety notes apply; please refer to the Ex documentation.

When this device is intended for permanent connection to the mains.

It is required (for example for service) to mount an external switch or circuit breaker near the device for disconnection from the mains. It shall be easily reachable by the operator and marked as the disconnecting the device for this equipment.

The switch or circuit breaker and wiring has to be suitable for the application and shall also be in accordance with the local (safety) requirements of the (building) installation (e.g. IEC 60947-1/-3)

The power terminals in the terminal compartments are equipped with additional hinged lids to prevent accidental contact.

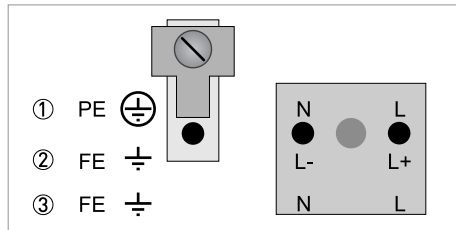


Figure 4-4: Power supply connection

① 100...230 VAC (-15% / +10%), 22 VA

### Grounding of remote version

The device must be grounded in accordance with regulations in order to protect personnel against electric shocks.

For EMC reasons, connect the converter housing to a sufficiently low impedance grounding. If necessary, the external U-clamp (size M5) of the converter housing can be used for this purpose.

### 100...230 VAC (tolerance range for 100 VAC: -15% / +10%)

- Note the power supply voltage and frequency (50...60 Hz) on the nameplate.
- The protective ground terminal PE of the power supply must be connected to the separate U-clamp terminal in the terminal compartment of the signal converter

240 VAC + 5% is included in the tolerance range.

### 24 VDC (tolerance range: -55% / +30%)

### 24 VAC/DC (tolerance range: AC: -15% / +10%; DC: -25% / +30%)

- Note the data on the nameplate!
- For measurement process reasons, a functional ground FE must be connected to the separate U-clamp terminal in the terminal compartment of the signal converter.
- When connecting to functional extra-low voltages, provide a facility for protective separation (PELV) (according to VDE 0100 / VDE 0106 and/or IEC 60364 / IEC 61140 or relevant national regulations)

## 4.4 Input and outputs, overview

### 4.4.1 Combinations of the inputs/outputs (I/Os)

This signal converter is available with various input/output combinations.

#### Basic version

- Has 1 current output, 1 pulse output and 2 status outputs/limit switches.
- The pulse output can be set as status output/limit switch and one of the status outputs as a control input.

#### Ex i version

- Depending on the task, the device can be configured with various input and output modules.
- Current outputs can be active or passive.
- Current inputs are active.
- Optionally available with Foundation Fieldbus.

#### Modular version

- Depending on the task, the device can be configured with various input and output modules.
- Current inputs and outputs can be active or passive.
- Optionally available with Foundation Fieldbus or RS 485 Modbus.

#### Bus systems

- The device allows intrinsically safe and non intrinsically safe bus interfaces in combination with additional modules.
- For connection and operation of bus systems, please note the supplementary documentation.

#### Ex option

- For hazardous areas, all of the input/output variants for the housing designs with a terminal compartment in the Ex d (pressure-resistant casing) or Ex e (increased safety) versions can be delivered.
- For connection and operation of Ex devices, note the supplementary instructions.

#### 4.4.2 Description of the CG number

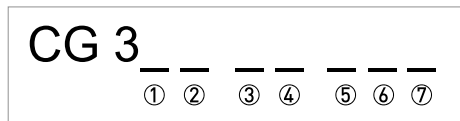


Figure 4-5: Marking (CG number) of the electronics module and input/output variants

- ① ID number: 6
- ② ID number: 0 = standard
- ③ Power supply option
- ④ Display (language versions)
- ⑤ Input/output version (I/O)
- ⑥ 1st optional module for connection terminal A
- ⑦ 2nd optional module for connection terminal B

The last 3 digits of the CG number ( ⑤ , ⑥ and ⑦ ) indicate the assignment of the terminal connections. Please see the following examples.

#### Examples for CG number

CG 360 11 100	100...230 VAC & standard display; basic I/O: $I_a$ or $I_p$ & $S_p/C_p$ & $S_p$ & $P_p/S_p$
CG 360 11 7FK	100...230 VAC & standard display; modular I/O: $I_a$ & $P_N/S_N$ and optional module $P_N/S_N$ & $C_N$
CG 360 81 4EB	24 VDC & standard display; modular I/O: $I_a$ & $P_a/S_a$ and optional module $P_p/S_p$ & $I_p$

Abbreviation	Identifier for CG no.	Description
$I_a$	A	Active current output
$I_p$	B	Passive current output
$P_a / S_a$	C	Active pulse output, frequency output, status output or limit switch (changeable)
$P_p / S_p$	E	Passive pulse output, frequency output, status output or limit switch (changeable)
$P_N / S_N$	F	Passive pulse output, frequency output, status output or limit switch according to NAMUR (changeable)
$C_a$	G	Active control input
$C_p$	K	Passive control input
$C_N$	H	Active control input to NAMUR Signal converter monitors cable breaks and short circuits according to EN 60947-5-6. Errors indicated on LC display. Error messages possible via status output.
$II n_a$	P	Active current input (for Modular I/O)
$II n_p$	R	Passive current input (for Modular I/O)
$2 \times II n_a$	5	Two active current inputs (for Ex i I/O)
-	8	No additional module installed
-	0	No further module possible

Table 4-1: Description of abbreviations and CG identifier for possible optional modules on terminals A and B

### 4.4.3 Fixed, non-alterable input/output versions

This signal converter is available with various input/output combinations.

- The grey boxes in the tables denote unassigned or unused connection terminals.
- In the table, only the final digits of the CG no. are depicted.
- Connection terminal A+ is only operable in the basic input/output version.

CG no.	Connection terminals								
	A+	A	A-	B	B-	C	C-	D	D-

#### Basic I/Os (standard)

1 0 0		I <sub>p</sub> + HART® passive ①	S <sub>p</sub> / C <sub>p</sub> passive ②	S <sub>p</sub> passive	P <sub>p</sub> / S <sub>p</sub> passive ②
	I <sub>a</sub> + HART® active ①				

#### Ex i I/Os (option)

2 0 0				I <sub>a</sub> + HART® active	P <sub>N</sub> / S <sub>N</sub> NAMUR ②
3 0 0				I <sub>p</sub> + HART® passive	P <sub>N</sub> / S <sub>N</sub> NAMUR ②
2 1 0		I <sub>a</sub> active	P <sub>N</sub> / S <sub>N</sub> NAMUR C <sub>p</sub> passive ②	I <sub>a</sub> + HART® active	P <sub>N</sub> / S <sub>N</sub> NAMUR ②
3 1 0		I <sub>a</sub> active	P <sub>N</sub> / S <sub>N</sub> NAMUR C <sub>p</sub> passive ②	I <sub>p</sub> + HART® passive	P <sub>N</sub> / S <sub>N</sub> NAMUR ②
2 2 0		I <sub>p</sub> passive	P <sub>N</sub> / S <sub>N</sub> NAMUR C <sub>p</sub> passive ②	I <sub>a</sub> + HART® active	P <sub>N</sub> / S <sub>N</sub> NAMUR ②
3 2 0		I <sub>p</sub> passive	P <sub>N</sub> / S <sub>N</sub> NAMUR C <sub>p</sub> passive ②	I <sub>p</sub> + HART® passive	P <sub>N</sub> / S <sub>N</sub> NAMUR ②
2 3 0		IIn <sub>a</sub> active	P <sub>N</sub> / S <sub>N</sub> NAMUR C <sub>p</sub> passive ②	I <sub>a</sub> + HART® active	P <sub>N</sub> / S <sub>N</sub> NAMUR ②
3 3 0		IIn <sub>a</sub> active	P <sub>N</sub> / S <sub>N</sub> NAMUR C <sub>p</sub> passive ②	I <sub>p</sub> + HART® passive	P <sub>N</sub> / S <sub>N</sub> NAMUR ②
2 4 0		IIn <sub>p</sub> passive	P <sub>N</sub> / S <sub>N</sub> NAMUR C <sub>p</sub> passive ②	I <sub>a</sub> + HART® active	P <sub>N</sub> / S <sub>N</sub> NAMUR ②
3 4 0		IIn <sub>p</sub> passive	P <sub>N</sub> / S <sub>N</sub> NAMUR C <sub>p</sub> passive ②	I <sub>p</sub> + HART® passive	P <sub>N</sub> / S <sub>N</sub> NAMUR ②

① Function changed by reconnecting

② Changeable

#### 4.4.4 Alterable input/output versions

This signal converter is available with various input/output combinations.

- The grey boxes in the tables denote unassigned or unused connection terminals.
- In the table, only the final digits of the CG no. are depicted.
- Term. = (connection) terminal

CG no.	Connection terminals								
	A+	A	A-	B	B-	C	C-	D	D-

#### Modular IOs (option)

4 __		max. 2 optional modules for term. A + B	$I_a$ + HART® active	$P_a / S_a$ active ①
8 __		max. 2 optional modules for term. A + B	$I_p$ + HART® passive	$P_a / S_a$ active ①
6 __		max. 2 optional modules for term. A + B	$I_a$ + HART® active	$P_p / S_p$ passive ①
B __		max. 2 optional modules for term. A + B	$I_p$ + HART® passive	$P_p / S_p$ passive ①
7 __		max. 2 optional modules for term. A + B	$I_a$ + HART® active	$P_N / S_N$ NAMUR ①
C __		max. 2 optional modules for term. A + B	$I_p$ + HART® passive	$P_N / S_N$ NAMUR ①

#### FOUNDATION Fieldbus (option)

E __		max. 2 optional modules for term. A + B	V/D+ (2)	V/D- (2)	V/D+ (1)	V/D- (1)
------	--	-----------------------------------------	----------	----------	----------	----------

#### Modbus (option)

G __ ②		max. 2 optional modules for term. A + B		Common	Sign. B (D1)	Sign. A (D0)
H __ ③		max. 2 optional modules for term. A + B		Common	Sign. B (D1)	Sign. A (D0)

① Changeable

② Not activated bus terminator

③ Activated bus terminator

Please fill in this form and fax or email it to your local representative.  
Please include a sketch of the pipe layout as well, including the X, Y, Z dimensions.

**Customer information:**

Date:	
Submitted by:	
Company:	
Address:	
Telephone:	
Fax:	
E-mail:	

**Flow application data:**

Reference information (name, tag etc):	
New application Existing application, currently using:	
Measurement objective:	
Flow application data / Medium	
Gas type / composition:	
CO <sub>2</sub> content:	
CH <sub>4</sub> content:	
H <sub>2</sub> S content:	
Moisture content:	
Density or molecular weight:	
Velocity of sound:	
Flow rate	
Normal:	
Minimum:	
Maximum:	
Temperature	
Normal:	
Minimum:	
Maximum:	
Pressure	
Normal:	
Minimum:	
Maximum:	

**Piping details**

Nominal pipe size:	
Inner / outer diameter:	
Wall thickness / schedule:	
Pipe material:	
Straight inlet / outlet section (DN):	
Upstream situation (elbows, valves, pumps):	
Type of valve or reducer:	
Pressure drop over the valve or reducer:	
Position of the valve or reducer compared to flowmeter:	
Flow orientation (vertical up / horizontal / vertical down / other):	

**Environment details**

Corrosive atmosphere:	
Sea water:	
High humidity (% R.H.)	
Nuclear (radiation):	
Hazardous area:	
Additional details:	

**Hardware requirements:**

Accuracy requested (percentage of rate):	
Power supply (voltage, AC/DC):	
Analogue output (4..20 mA)	
Pulse (specify minimum pulse width, pulse value):	
Digital protocol:	
Options:	
Remote mounted signal converter:	
Specify cable length:	
Accessories:	

## KROHNE – Products, Solutions and Services

- Process instrumentation for flow, level, temperature, pressure measurement and process analytics
- Flow metering, monitoring, wireless and remote metering solutions
- Engineering, commissioning, calibration, maintenance and training services

Head Office KROHNE Messtechnik GmbH  
Ludwig-Krohne-Str. 5  
47058 Duisburg (Germany)  
Tel.: +49 203 301 0  
Fax: +49 203 301 10389  
info@krohne.de

The current list of all KROHNE contacts and addresses can be found at:  
[www.krohne.com](http://www.krohne.com)

